

Intake Kit Installation Instructions: Ford F-150 4.6 V8 Stage-2 Air Intake

See Below for Application

Kit Part #	51/54-11122	
Make:	Ford	
Model:	Years	Engine
F150	2006-2007	V8-4.6L

Tools Required:
 5/16" nut driver
 10mm socket
 Flathead screwdriver
 Ratchet and extension

Note: Please confirm Parts List and read all instruction steps before proceeding with actual installation.

Part List:
 1 Air filter part # 24-90039 or Pro Dry S™ 21-90039
 1 Housing powder coat black wrinkle
 1 Intake
 1 Adapter
 2 Gasket MAF
 4 M6 x 1 x 20mm hex head
 2 Spacer nylon
 1 Coupler 3" x 3"
 1 Coupler Hump 3-1/2" x 3"
 4 M6 Washer Wavy

2 Screw Hex head 1/4-20x1.25	1-Grommet, rubber
2 Washer 1/4"	1-Plastic plug
1 Trim seal (18.5")	1-Vacuum cap 3/4"
2 Clamps #052	1-M6x1x12 Screw
2 Clamps #060	1-M6 Washer
2 Clamps mini #012	2-Locknut Nylon
2 Clamps mini #008	1-MAF sensor tube
1 Grommet, temp sensor	1-MAF sensor tube
1 hose 5/8" ID (21")	2-M4x7x16 screws
1 Hose 3/4" ID (28")	2-Nylon spacers

*Save all stock parts for future use if needed



P.O. Box 1719
 Corona, CA 92878
 Support: 877-512-8111
 www.aFeFilters.com



Complete kit with parts.



Complete stock intake.



Remove the three 10mm bolts holding the throttle body cover..



Loosen the factory hose clamp on the throttle body, and the 3/4" idle air bypass hose and the 5/8" breather hose. On some 04-05 models the IAB is not present.




Unplug the IAT sensor and remove the intake duct from the engine. On some 04-05 models the IAT sensor is not present.



Lift air filter housing by pulling straight up it is held in place with 2 rubber gromets. On the back side of the canister is the MAF harness. Unplug harness from vehicle and remove. Save items for future use if needed.



Separate the filter canister by unfastening the band clamp and removing the air filter. Disconnect the harness from the MAF sensor. Unbolt the MAF Sensor from the filter base and the short wire harness set aside for later use

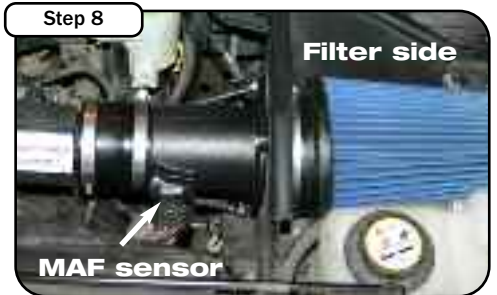

Mount the MAF sensor and MAF sensor gasket to the outside of the air filter housing, use injection molded adapter on filter side. Use the (4) M6x1x20 screws and tighten down with a 10mm wrench.



Remove the 8mm bolt that secures the cruise control (see arrow). Insert the plastic spacers into the rubber gromets. On the 04-05 models there is no cruise control bracket. A m6 screw and washer is provided.



Insert the air filter housing into the engine bay and bolt down the housing to the bottom bracket with the supplied nuts and bolts. Re install the 8mm bolt that secures the cruise control.



Install the hump coupler and clamps on the air filter housing and install the 3" straight coupler and clamp on the throttle body



Install the smaller end of the intake tube into the throttle body coupler and insert other end into the hump coupler on the housing. Tighten down clamps on both couplers.



Install the rubber grommet into the IAT sensor location. Reinstall the IAT sensor and reconnect harness. At this time plug the MAF sensor into the harness and secure harness on the side of the housing with the included mounting holes. If you do not have a IAT sensor use the provided grommet and cap to seal the opening.



Install the 3/4" idle air bypass hose and the 5/8" breather hose on the intake tube and tighten down clamps. If you do not have a idle air bypass valve seal with the provided 3/4" vacuum cap. Install air filter and tighten down the clamp.



Place enclosed CARB EO sticker on a clean/smooth surface near the intake system. EO identification label is required to pass the smog test inspection. Your installation is now complete. Close hood slowly to verify hood clearance. Check and retighten connections and filter after a few hours of operation.