

IMF116



2024+ SUBARU CROSSTREK WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS


















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap

replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 10mm/11mm wrench, Phillips screwdriver, pick. **Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF116 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF116 SEE PAGE 3	PART DESCRIPTION	QUANTITY
MF116-LF	LEFT FRONT	1
MF116-RF	RIGHT FRONT	1
MF116-LR	LEFT REAR	1
MF116-RR	RIGHT REAR	1
BRACKET PN: BMF116		
BMF106-FRT 	BRACKET FRONT	2
BMF116-LR 	BRACKET LEFT REAR	1
BMF116-RR 	BRACKET RIGHT REAR	1
HARDWARE PN: HMF116		
.25SP 	SPACER	2
1SS#8 	SCREW	2
1.5SS 	LONG SCREW	8
BLKNUT 	NUT	2
BMF106-ST-L 	STICKER LEFT	1
BMF106-ST-R 	STICKER RIGHT	1
EXPANCH 	EXPANSION ANCHOR	2
HXBLT 	BOLT	2
POLCLP 	CLIP	8
SMF29-1 	FOAM SPACER	4
SMWASH 	WASHER	14
SSLNUT 	LOCK NUT	2

FRONT FLAP To access interior wheel well, turn steering wheel towards installation side. Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

2024+ SUBARU CROSSTREK WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS

Bracket/Hardware for 1 Flap → 1 x BMF106-FRT; 1 x BMF106-ST-L/R; 2 x 1.5SS; 1 x BLKNUT; 1 HXBLT; 2 x POLCLP; 2 x SMF29-1; 3 x SMWASH

FIGURE A Remove factory fasteners 1 & 2. Temporarily remove and retain 3.

FIGURE B Lift liner away to install POLCLP over mounts 1 & 2. Replace liner.

FIGURE C Reinstall factory fastener 3. Adhere SMF29-1 on liner mounts 1 & 2.


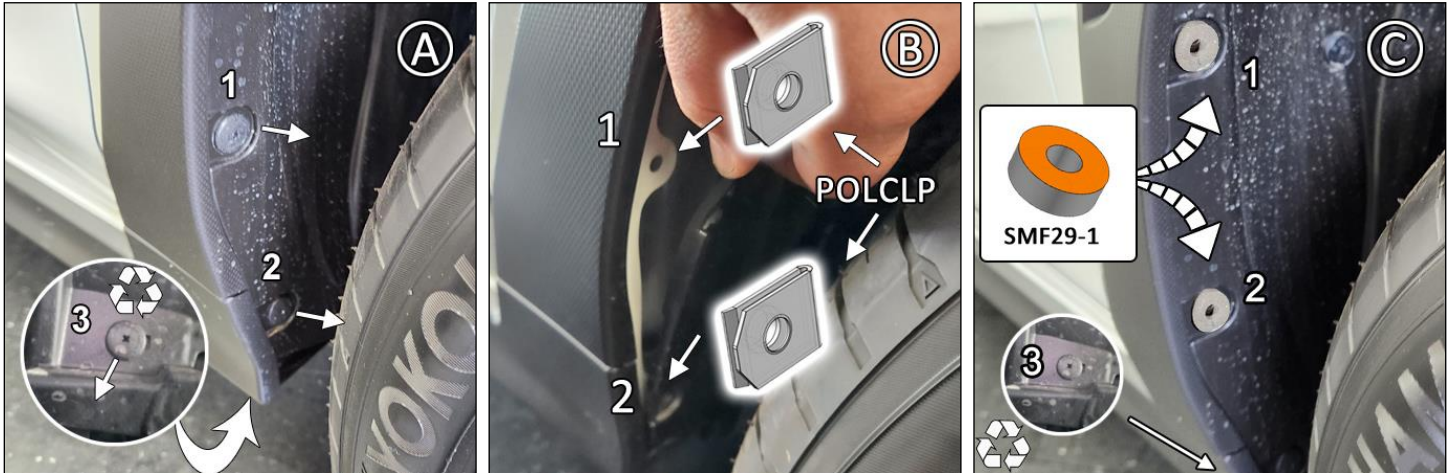


FIGURE D/E Place BMF106-FRT on logo-side of flap. Adhere BMF106-ST-L/R to BMF106-FRT side facing rear bumper. Install SMWASH & 1.5SS through mounts 1 & 2 and SMWASH & HXBLT through flap/bracket mount 4. Secure with BLKNUT.

FIGURE F To enhance clearance between tire and flap, bend bottom section of BMF106-FRT towards rear bumper. Align flaps to even ground before tightening fasteners until washers just seat against flap.

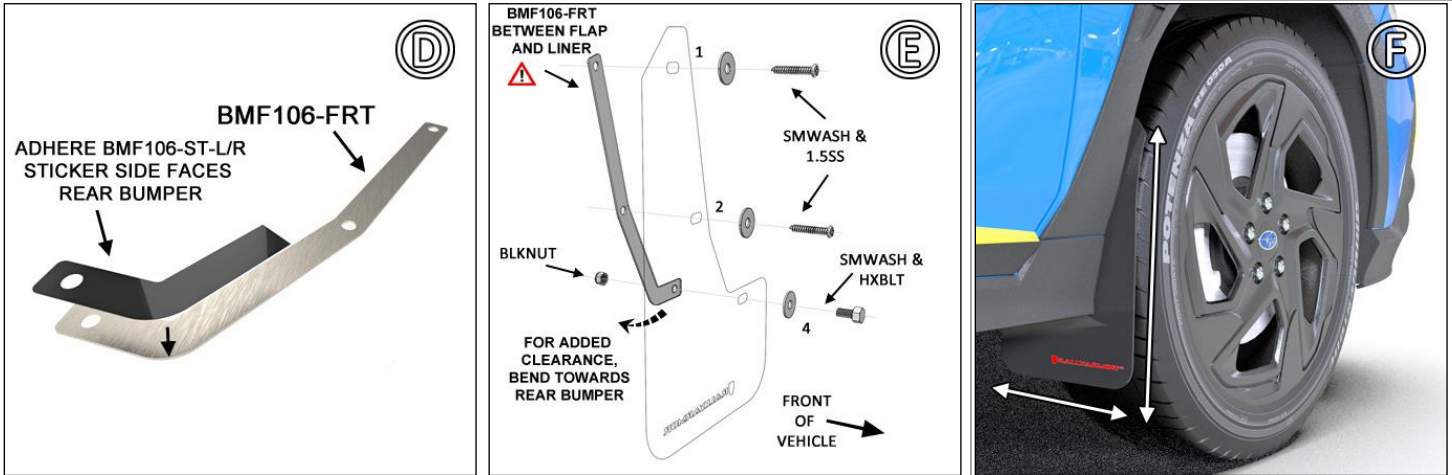

REAR FLAP Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF116-LR/RR; 1 x .25SP; 1 x 1SS#8; 2 x 1.5SS; 1 x EXPANCH; 2 x POLCLP; 4 x SMWASH
1 x SSLNUT

FIGURE G Install POLCLP over mounts 1 & 2. Remove factory fastener 3.

FIGURE H Install EXPANCH into mount 3. Use a pick to open EXPANCH hole about 1/2" into liner. Install BMF116-LR/RR with .25SP between liner and BMF116-LR/RR. Secure with SMWASH and 1SS#8.


FIGURE I Logo-side of flap facing rear bumper, install SMWASH & 1.5SS into mounts 1 & 2. Secure mount 4 with SMWASH

IMF116



2024+ SUBARU CROSSTREK WILDERNESS MUD FLAP INSTALLATION INSTRUCTIONS

& SSLNUT. Align mud flaps to even ground. Tighten fasteners only until washers seat against mud flap.

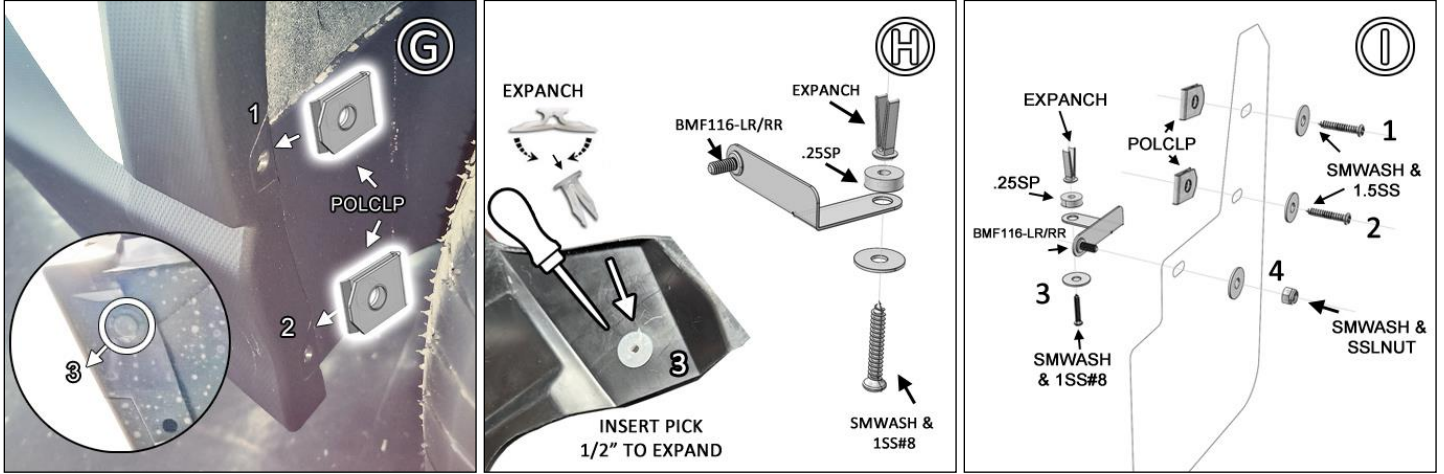

FRONT

MF116 MOUNTING DIAGRAM

REAR

