

Please check with your local and state law enforcement agencies for exact regulation requirements.


Note:

The installation of this axle back exhaust system does require mechanical skills. Injen strongly recommends that this system be installed by a professional mechanic.

Start the installation by removing a portion of the exhaust system from the rear axle-back.



Line up the new plate hanger to the center of the rear axle and use the two m8 bolts.

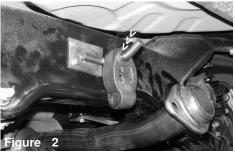

The hanger is installed and one of the unused grommets is re-hung on the hanger.



Raise the axle-back in place and insert the first hanger on the existing rear grommet.



Push the second hanger near the flange into the second grommet as shown above.



align the flange to the stock donut flange and use the stock spring loaded bolts and m10 nuts supplied.



Align the entire axle-back for best fit and tighten the nuts and bolts, keep tip away from the bumper.