




Figure 1



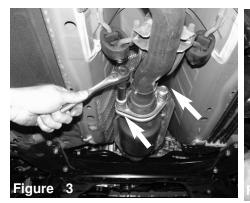


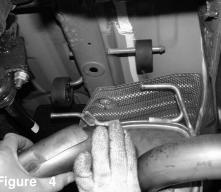

Pull all exhaust hangers off of factory exhaust system

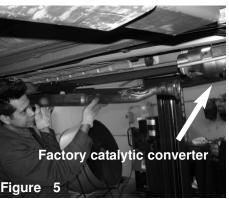

Detach the primary exhaust section off of the catalytic converter






Have someone help you support the primary end while you detach the rear section of the factory exhaust system.




Factory exhaust system fully detached in one piece




Remove the donut gasket from the factory catalytic converter

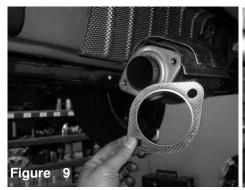

Place the supplied 3.00" gasket onto the catalytic converter

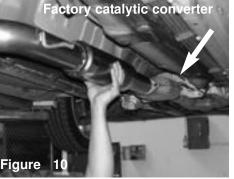

Position the primary Injen exhaust pipe and attach the flanges end to the factory catalytic converter

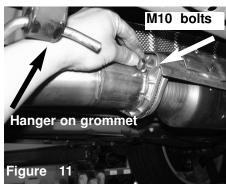


Place two M10 bolts to attach the Injen primary pipe to the factory catalytic converter. Remember to place the two hangers on the Injen primary pipe




Use a 14mm socket and rachet and tighten the M10 nuts and bolts



Position the rear section of the Injen exhuast system

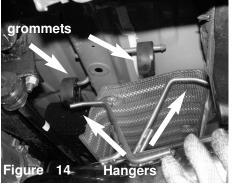

Attach the hangers onto the grommet on the rear section of the Injen exhaust system

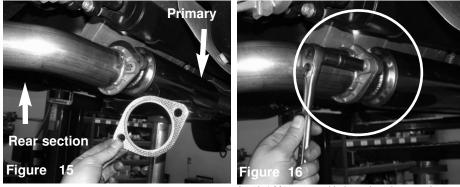

Once the rear section is hung and in position, place a 3.00" gasket inbetween the primary and rear section

Attach 2 M10 nuts and bolts to the primary and seconadary flange. Use a 14mm socket and rachet to tighten the nuts and bolts.



Congratulations! You have just completed the installation of the Injen cat-back exhaust system. Periodically, check the fitment of the exhaust system, the exhaust should always continue to hang in the same position.