

advanced FLOW engineering Instruction Manual P/N: 77-43023

Make: Ford Make: Ford Make: Ford Make: Lincoln Model: F-150 Raptor Model: F-150 Limited Model: Expedition Platinum Model: Navigator Year: 2017-2020 E Year: 2019-2020 E Year: 2018-2020 E Year: 2018-2020 E

Engine: V6-3.5L (tt) EcoBoost Engine: V6-3.5L (tt) EcoBoost Engine: V6-3.5L (tt) EcoBoost Engine: V6-3.5L (tt) EcoBoost



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
А	1	Module	R77-43023
В	1	LED Switch	05-70029
С	2	Velcro (2 Inches)	05-01244
D	4	Cable Ties	05-60167

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.








REMOVAL

SLEEP MODE

Figure A

Refer to Figure A for Step 1.

- Step 1: Before installing your aFe module, you will have to place your vehicles ECU in sleep mode. In order to do this you will need to do the following:
- If the engine is cold, open the hood, close the doors lock the car and wait 30 seconds.
- If the engine is warm, open the hood, close the doors lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes, disconnect the battery.

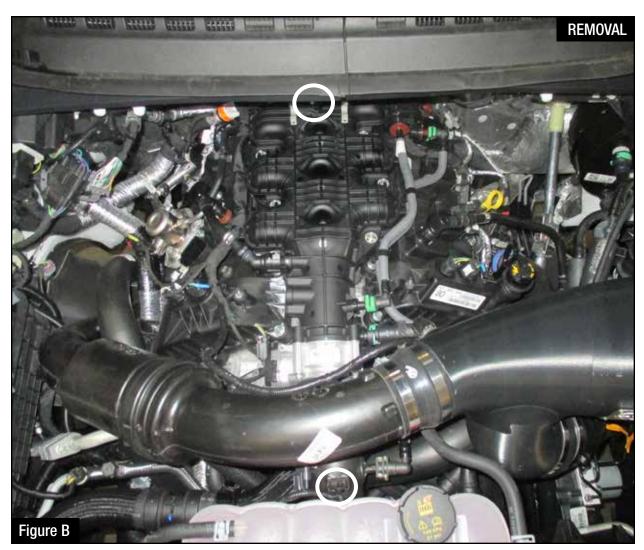

Refer to Figure B for Steps 2-3.

Step 2: Remove engine cover to gain access to the MAP sensor.

Step 3: Locate the MAP and TMAP sensor. The MAP sensor is located on the back of the intake manifold towards the firewall. The TMAP sensor is located on the charge intake tube just before the throttle body.





Refer to Figures C for Steps 4-5.

Step 4: Locate and disconnect the MAP sensor.

Step 5: Locate the MAP sensor jumper harness on the aFe module. This is the shorter harness. Plug the male connector of the module to the stock MAP sensor, then take the female connector of the module and connect to the male connector of the engine harness.

Note: Make sure connections are fully engaged. Usually, connectors make a snapping sound when fully engaged.



Refer to Figure D for Steps 6-7.

Step 6: Disconnect the MAP sensor.

Step 7: Locate the TMAP sensor jumper harness on the aFe module. This is the longer harness. Plug the male connector of the module to the stock TMAP sensor, then the female connector of the module male connector of the engine harness.





Refer to Figure E for Steps 8-9.

Step 8: Carefully route the switch cable behind steering wheel cover. Step 9: Mount the Switch on an open, flat surface.



Refer to Figure F for Step 10.

Step 10: Route the switch cable through firewall and into the engine bay. Follow the main harness through the grommet into the firewall. Plug the end of the cable to the module.





Refer to Figure G for Steps 11-12.

- Step 11: Mount the module in a safe location, using the supplied Velcro strip. Then, secure the wires and module away from any extreme heat and moving parts, with the provided ties. Make sure all connections are secured and fully engaged.
- Step 12: Reinstall the engine cover.



Figure H

Refer to Figure H for Step 13.

Step 13: When turning on the vehicle, the switch will go through the light. It will stop at its last setting.

The LED on the switch represents the different level of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any moment.

Thank you for choosing aFe POWER!

INSTALL




Page left blank intentionally

Page left blank intentionally



OE Replacement Air Filter

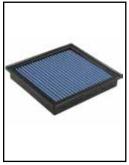

P/N: 30-10162 (P5R) 31-10162 (PDS)

Cat-Back Side-Exit Exhaust System



P/N: 49-43091-B (Blk Tip) 49-43091-P (Pol Tip)



P/N: 51-73115 (PDS) 54-73115 (P5R)

Turbo Downpipes



P/N: 48-43020-HC (Street) 48-43020-HN (Race)

Cat-Back Exhaust System



P/N: 49-43045-B (Blk Tip) 49-43045-P (Pol Tip)

Intercooler w/ Tubes



P/N: 46-20292-B

Rear Differential Cover



P/N: 46-70152-WL (w/ 0il) 46-70152 (Blk) 46-70150 (RAW)

Sprint Booster V3



P/N: 77-13001

Warranty

General Terms:


- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe
 product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization
 ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product
 to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA.
 Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the
 defective product within a reasonable time, not to exceed thirty days.

Product Category Direct OE Replacement Filters Racing Filters Universal Air Intake Systems Exhaust Systems Intercoolers & Intercooler Tubes Intake Manifolds Differential Cover Exhaust Manifolds Throttle Body Spacers Fluid Filters Pre-Filters Heavy Duty OE Replacement PowerSports OE Benlacement	P/N Prefix 10, 11, 30, 31, 71, 73 18 21, 24, 72,TF 50, 51, 54, 55, 75,TR.TA,TL 49 46-2 46-1 46-7 46 46-3 44 28 70 81, 87	Warranty duration Life of the vehicle 1 year 2 years 2 years 2 years 2 years 2 years Life of the vehicle 2 years 2 years 2 years 90 days 2 years 2 years 2 years 2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years
Tuners	77	1 Year

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



advanced FLOW engineering, inc. 252 Granite Street Corona, CA 928 TEL: 951.493.7100 TECH: 951.493.7185 E-Mail:Tech@aFepower.com

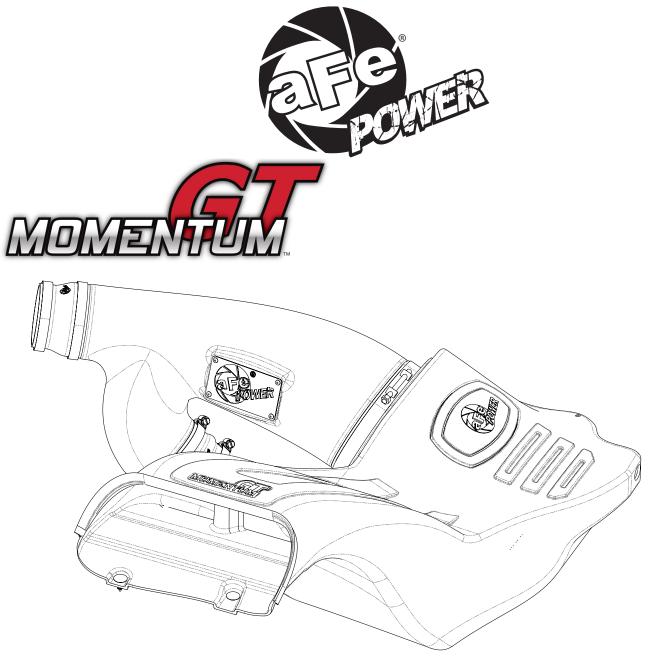

advanced FLOW engineering Instruction Manual P/N: 51-73115 / 54-73115 / 75-73115

 Make: Ford
 Model: F-150 Raptor
 Year:
 2017-2020
 Engine:
 V6-3.5L (tt)
 EcoBoost

 Make: Ford
 Model: F-150
 Year:
 2017-2020
 Engine:
 V6-3.5L (tt)
 EcoBoost

 Make: Ford
 Model: F-150
 Year:
 2018-2020
 Engine:
 V6-2.7L (tt)
 EcoBoost




- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro DRY S)	21-91092
A2	1	Air Filter (Pro 5R)	24-91092
A3	1	Air Filter (Pro GUARD-7)	72-91092
B	1	Seal, Trim (15.5")	05-00072
С	1	Fitting, Air Temp Sensor	05-01454
D	1	Tube	05-73115B1
Ε	1	Housing	05-73115B2
F	1	Coupling, Silicone Reducer	05-01331
G	1	Coupling, Silicone Hump	05-01332
Н	2	Clamp, #064	03-50006
	1	Clamp, #052	03-50008
J	1	Clamp, #044	03-50019
K	2	Retainer Clip	03-50616
L	1	Grommet	03-50167
Μ	1	Vent Insert	05-01405
Ν	1	Harness, IAT Extension	05-70023

Installation will require the following tools:

7mm/8mm/11mm nut driver or deep sockets, flat head screw driver, 13mm socket and driver, panel popper tool. ***Temp Sensor harness is only required for V6-2.7L (tt) EcoBoost Applications.**

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

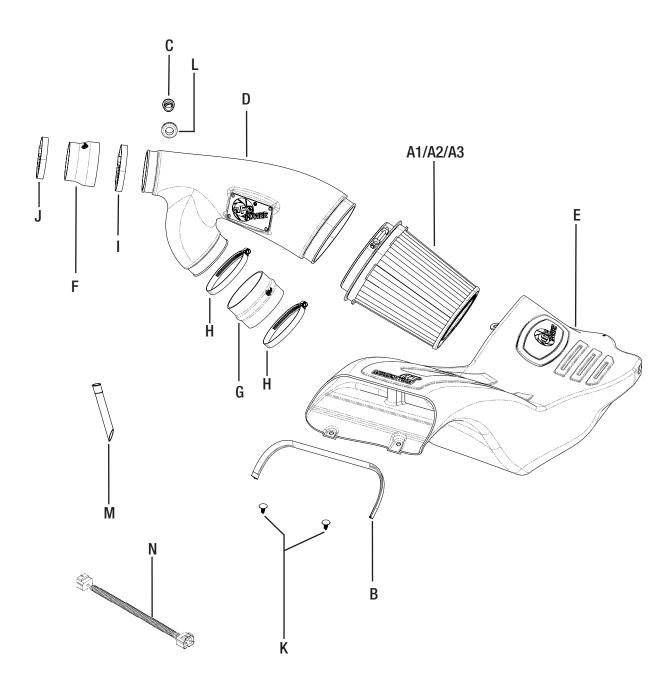





Refer to Figure A for Steps 1-2

- Step 1: Unplug temp sensor harness (1) from the back side of the intake tube. Unclip the coolant line from the intake tube.
- Step 2: Loosen the clamps 2 on the intake tubes. Unclip the top of the air box 3 and remove the tube, air filter and top of the air box from the vehicle.



Refer to Figure B for Steps 3-5

Step 3: Unclip the wire from the back of the air box.

Step 4: Remove the wastegate accuator from the housing.

Step 5: Remove the screw (4) and the two plastic rivets (5) securing the housing, then pull the factory air box out of the truck.



Refer to Figure C for Step 6

(These procedures should be done with the inlet tubes installed on the engine. It is shown off the vehicle for better illustration.)


Step 6: Locate the o.e. plastic tube feeding the driver's side turbo inlet.



Refer to Figure I for Step 7


Step 7: Locate the valve cover vent tube that feeds into driver's side turbo inlet. It is not necessary to remove the engine cover.



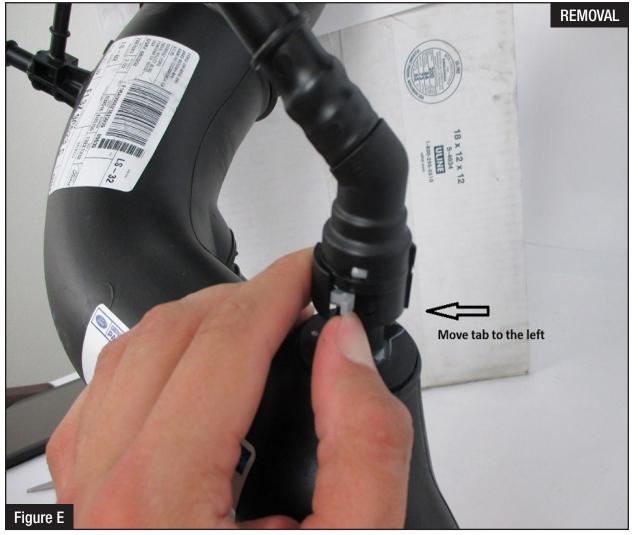

Refer to Figure E for Step 8

Step 8: Note the release clip on the vent tube connectors. Apply pressure against the exposed tail and pull vent fitting off of the turbo inlet tube. It is not necessary to disconnect at the valve cover end. There is a sensor and wire harness on this vent tube. Do not damage or remove these components.

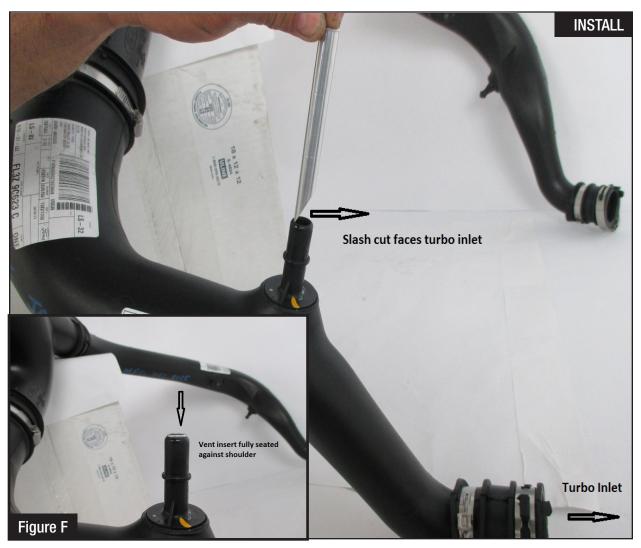

Refer to Figure F for Step 9

Step 9: Insert vent fitting with slash cut facing turbo inlet. It should not be a loose fit. It is direction dependent and must not rotate once installed.





Refer to Figure G for Steps 10-11

- Step 10: Reconnect the vent fitting. It will snap over without having to release the plastic clip. Pull up slightly to confirm installation.
- Step 11: Installation is complete. Any codes can be cleared with a code reader or by disconnecting the battery. You will lose any radio presets with battery disconnection.

If removal of the vent insert is required, it can be pulled out with internal snap ring pliers.



Refer to Figure H for Steps 12-13

Step 12: Transfer the grommet 6 from the factory air box to the aFe air box. Step 13: Install the furnished seal trim 7 on the top edge of the aFe housing.

Optional: Drill two small holes in the top of the housing for the wastegate accutator wire harness to clip into. There are two drill points marking these locations and the hole size is 1/4". (8) This will allow you to mount the wastegate actuator wire to the air box, however, it will require you to relocate the push clips on the factory wire.





Refer to Figure I for Steps 14-17

Step 14: Install the aFe housing into the truck by pushing it into the factory mounting grommets.

- Step 15: Re-install the factory screw (9) removed in Step 5, inside the aFe housing.
- Step 16: Secure the housing with the two furnished plastic rivets (0).
- Step 17: Reconnect the wastegate accutator to the bracket on the back side of the housing. (1)



Refer to Figure J for Step 18

Step 18: Slide aFe filter inside the housing and push it in until it locks.





Refer to Figure K for Steps 19-21

Step 19: Install grommet into hole in aFe tube then push the aluminum fitting in it. Step 20: Install couplings and clamps onto tube ends. Do not tighten clamps yet. Step 21: Transfer the temperature sensor from the factory intake tube to the new aFe intake tube.



Refer to Figure L for Steps 22-24

- Step 22: Install the aFe tube in the truck by sliding the couplings over the factory tube then the tube end into aFe filter.
- Step 23: Align tube correctly then tighten all clamps.
- Step 24: Reconnect the temp sensor harness.
- Optional: Locate the two plastic push clips for the wastegate actuator harness. Cut the tape securing these to the wire. Place the push clip in the drilled holes on the housing. Hold the wire in place along side these push clips and retape the push clips in the appropriate locations on the wire (12).

NOTE: V6-2.7L (tt) EcoBoost only use the provided sensor harness extension.





Refer to Figure M for Step 25

Step 25: Make sure all clamps and screws are tight. Remove plastic film from aFe window. Your installation is now complete.

NOTE: Check all bolts, clamps, and connectors after 200 miles.

Page left blank intentionally



Pro DRY S Air Filter



P/N: 21-91092



P/N: 24-91092



Rear Differential Cover

P/N: 46-70152-WL (w/ 0il)

46-70152 (Black) 46-70150 (RAW)

P/N: 72-91092

Turbo Downpipes



P/N: 48-43020-HC (Street) 48-43020-HN (Race)

Intercooler w/ Tube

P/N: 46-20292-B



P/N: 49-43091-B (Blk. Tips) 49-43091-P (Pol. Tips)

Exhaust System

P/N: 49-43045-B (Blk. Tips) 49-43045-P (Pol. Tips)

Intercooler Cold-Side Tube



P/N: 46-20299-B P/N: 77-43023 To purchase any of the items above, view airflow charts, dyno graphs, photos, and video; please go to aFepower.com.



Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is nontransferable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe
 product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization
 ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product
 to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA.
 Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the
 defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72	2 years
Air Intake Systems	50, 51, 54, 55, 75	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



advanced FLOW engineering, inc. 252 Granite Street Corona, CA 92879 TEL: 951.493.7100 • TECH: 951.493.7185 E-Mail:Tech@aFepower.com